



TIPO ΤΙΠ	MODELO DE AQUECIMENTO E ARREFECIMENTO (CICLO REVERSO) INVERSOR МОДЕЛЬ С РЕЖИМОМ ОХЛАЖДЕНИЯ И ОБОГРЕВА (ОБРАТНЫЙ ЦИКЛ) ИНВЕРТОР	
MODELO МОДЕЛЬ	UNIDADE INTERNA ВНУТРЕННИЙ ПРИБОР	ASY9LSACW
	UNIDADE EXTERNA НАРУЖНЫЙ ПРИБОР	AOY9LSAC
FICHA TECNICA		
ALIMENTAÇÃO ..... 230 V-50 Hz		
ARREFECIMENTO		
POTÊNCIA .....	2,6 kW (Mínimo 0,5 ~ Máximo 3,6 kW)	PRESSÃO MÁXIMA
POTÊNCIA CONSUMIDA .....	0,68 kW (Mínimo 0,25 ~ Máximo 1,38 kW)	ASPIRAÇÃO ..... 1.160 kPa
CORRENTE CONSUMIDA .....	3,0 A	COMPRESSÃO ..... 4.120 kPa
COEFICIENTE DE EFICIÊNCIA ENERGÉTICA .....	3,82	REFRIGERANTE .....
AQUECIMENTO		
POTÊNCIA .....	3,6 kW (Mínimo 0,5 ~ Máximo 6,0 kW)	DIMENSÕES E PESO (LÍQUIDO)
POTÊNCIA CONSUMIDA .....	0,91 kW (Mínimo 0,25 ~ Máximo 1,96 kW)	UNIDADE INTERNA
CORRENTE CONSUMIDA .....	4,0 A	ALTURA/COMPRIMENTO/PROFUNDIDADE .....
CORRENTE MÁX.		
Arrefecimento .....	6,0 A	PESO ..... 9,0 kg (NET)
Aquecimento .....	8,5 A	UNIDADE EXTERNA
		ALTURA/COMPRIMENTO/PROFUNDIDADE .....
		PESO ..... 33 kg (NET)

ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ		
ЭЛЕКТРОПИТАНИЕ ..... 230 В-50 Гц		
ОХЛАЖДЕНИЕ		
МОЩНОСТЬ .....	2,6 киловатт (минимум 0,5-максимум 3,6 киловатт)	МАКСИМАЛЬНОЕ ДАВЛЕНИЕ
ВХОДНАЯ МОЩНОСТЬ .....	0,68 киловатт (минимум 0,25-максимум 1,38 киловатт)	ВСАСЫВАНИЕ ..... 1.160 кПа
ЭЛЕКТРОТОК .....	3,0 А	Выпуск ..... 4.120 кПа
КОЭФФИЦИЕНТ ЭНЕРГОСБЕРЕЖЕНИЯ .....	3,82	ХЛАДАГЕНТ .....
ОБОГРЕВ		
МОЩНОСТЬ .....	3,6 киловатт (минимум 0,5-максимум 6,0 киловатт)	ГАБАРИТЫ И МАССА
ВХОДНАЯ МОЩНОСТЬ .....	0,91 киловатт (минимум 0,25-максимум 1,96 киловатт)	ВНУТРЕННИЙ ПРИБОР
ЭЛЕКТРОТОК .....	4,0 А	Высота/Ширина/Глубина .....
МАКСИМАЛЬНАЯ СИЛА ТОКА		
Охлаждение .....	6,0 А	Масса ..... 9,0 кг (нетто)
Обогрев .....	8,5 А	НАРУЖНЫЙ ПРИБОР
		Высота/Ширина/Глубина .....
		Масса ..... 33 кг (нетто)


TIPO ΤΙΠ	MODELO DE AQUECIMENTO E ARREFECIMENTO (CICLO REVERSO) INVERSOR МОДЕЛЬ С РЕЖИМОМ ОХЛАЖДЕНИЯ И ОБОГРЕВА (ОБРАТНЫЙ ЦИКЛ) ИНВЕРТОР	
MODELO МОДЕЛЬ	UNIDADE INTERNA ВНУТРЕННИЙ ПРИБОР	ASY12LSACW
	UNIDADE EXTERNA НАРУЖНЫЙ ПРИБОР	AOY12LSAC

FICHA TECNICA		
ALIMENTAÇÃO ..... 230 V-50 Hz		
ARREFECIMENTO		
POTÊNCIA .....	3,5 kW (Mínimo 0,9 ~ Máximo 4,2 kW)	PRESSÃO MÁXIMA
POTÊNCIA CONSUMIDA .....	1,03 kW (Mínimo 0,25 ~ Máximo 1,61 kW)	ASPIRAÇÃO ..... 1.160 kPa
CORRENTE CONSUMIDA .....	4,6 A	COMPRESSÃO ..... 4.120 kPa
COEFICIENTE DE EFICIÊNCIA ENERGÉTICA .....	3,40	REFRIGERANTE .....
AQUECIMENTO		
POTÊNCIA .....	4,8 kW (Mínimo 0,9 ~ Máximo 6,6 kW)	DIMENSÕES E PESO (LÍQUIDO)
POTÊNCIA CONSUMIDA .....	1,33 kW (Mínimo 0,25 ~ Máximo 2,3 kW)	UNIDADE INTERNA
CORRENTE CONSUMIDA .....	5,8 A	ALTURA/COMPRIMENTO/PROFUNDIDADE .....
CORRENTE MÁX.		
Arrefecimento .....	7,0 A	PESO ..... 9,0 kg (NET)
Aquecimento .....	10,0 A	UNIDADE EXTERNA
		ALTURA/COMPRIMENTO/PROFUNDIDADE .....
		PESO ..... 34 kg (NET)

ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ		
ЭЛЕКТРОПИТАНИЕ ..... 230 В-50 Гц		
ОХЛАЖДЕНИЕ		
МОЩНОСТЬ .....	3,5 киловатт (минимум 0,9-максимум 4,2 киловатт)	МАКСИМАЛЬНОЕ ДАВЛЕНИЕ
ВХОДНАЯ МОЩНОСТЬ .....	1,03 киловатт (минимум 0,25-максимум 1,61 киловатт)	ВСАСЫВАНИЕ ..... 1.160 кПа
ЭЛЕКТРОТОК .....	4,6 А	Выпуск ..... 4.120 кПа
КОЭФФИЦИЕНТ ЭНЕРГОСБЕРЕЖЕНИЯ .....	3,40	ХЛАДАГЕНТ .....
ОБОГРЕВ		
МОЩНОСТЬ .....	4,8 киловатт (минимум 0,9-максимум 6,6 киловатт)	ГАБАРИТЫ И МАССА
ВХОДНАЯ МОЩНОСТЬ .....	1,33 киловатт (минимум 0,25-максимум 2,3 киловатт)	ВНУТРЕННИЙ ПРИБОР
ЭЛЕКТРОТОК .....	5,8 А	Высота/Ширина/Глубина .....
МАКСИМАЛЬНАЯ СИЛА ТОКА		
Охлаждение .....	7,0 А	Масса ..... 9,0 кг (нетто)
Обогрев .....	10,0 А	НАРУЖНЫЙ ПРИБОР
		Высота/Ширина/Глубина .....
		Масса ..... 34 кг (нетто)



FUJITSU GENERAL LIMITED  
1116, Suenaga, Takatsu-ku, Kawasaki 213-8502, Japan

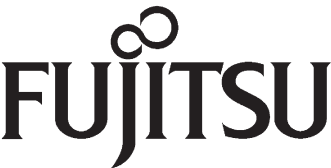



## HEAT & COOL MODEL (REVERSE CYCLE) ROOM AIR CONDITIONER WALL MOUNTED TYPE

Indoor Unit  
**ASY9LSACW**  
**ASY12LSACW**  
Outdoor Unit  
**AOY9LSAC**  
**AOY12LSAC**

KEEP THIS OPERATION MANUAL  
FOR FUTURE REFERENCE

FUJITSU GENERAL LIMITED

## OPERATING MANUAL BEDIENUNGSANLEITUNG MODE D'EMPLOI MANUAL DE FUNCIONAMIENTO MANUALE DI ISTRUZIONI ΕΓΧΕΙΡΙΔΙΟ ΛΕΙΤΟΥΡΓΙΑΣ MANUAL DE INSTRUÇÕES РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ

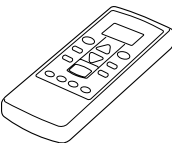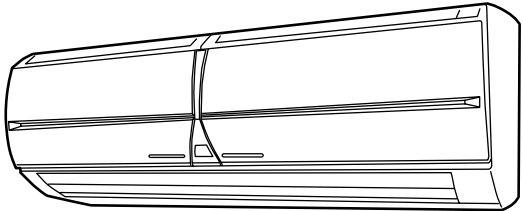

English

Deutsch

Français

Español

Italiano

Ελληνικά

Português

Русский

EC DECLARATION OF CONFORMITY  
CE-KONFORMITÄTSERKLÄRUNG  
DECLARATION DE CONFORMITE-CE  
CE DECLARACIÓN DE CONFORMIDAD  
DICHIARAZIONE DI CONFORMITÀ CE

ΔΗΛΩΣΗ ΕΓΚΡΙΣΗΣ ΚΑΤΑΛΛΗΛΟΤΗΤΑΣ  
CE VERKLARING VAN OVEREENSTEMMING  
EG-FÖRSÄKRAN OM ÖVERENSSTÄMMELSE  
DECLARAÇÃO DE CONFORMIDADE DA COMUNIDADE  
EUROPEIA (CE)  
ДЕКЛАРАЦИЯ О СООТВЕТСТВИИ СТАНДАРТАМ  
ЕВРОПЕЙСКОГО СООБЩЕСТВА (ЕС)

FUJITSU GENERAL (EURO) GmbH  
Werftstraße 20, D-40549 Düsseldorf, F. R. Germany

declares under its sole responsibility that the air conditioning models  
erklärt hiermit, daß die nachfolgend bezeichneten Raumklimageräte  
déclare sous sa seule responsabilité que les modèles de climatiseur ci-dessous  
declara bajo su exclusiva responsabilidad que los modelos de acondicionadores de aire  
dichiara sotto la sua unica responsabilità che i condizionatori d'aria modelli  
δηλώνει, ότι με δική της υπευθυνότητα τα μοντέλα των κλιματιστικών  
verklaart onder eigen verantwoordelijkheid dat de airconditioning-modellen  
intygat på eget ansvar att luftkonditioneringsmodellerna  
declara sob sua responsabilidade que os modelos de ar condicionado  
заявляет под свою исключительную ответственность, что модели кондиционеров


ASY9LSACW/AOY9LSAC ASH9LSACW/AOH9LSAC  
ASY12LSACW/AOY12LSAC ASH12LSACW/AOH12LSAC

to which this declaration relates is in conformity with the following standards:  
worauf sich diese Konformitätserklärung bezieht, folgenden Richtlinien entspricht:  
auxquels la présente déclaration s'applique, sont conformes aux normes suivantes:  
como esta declaración específica, cumplen con las siguientes normas:  
ai quali si riferisce la presente dichiarazione sono conformi ai seguenti standars:  
εις τα οποία η παρούσα δήλωση αναφέρεται, είναι προσαρμοσμένα σύμφωνα με τα παρακάτω πρότυπα:  
waarop deze verklaring van toepassing is, in conformiteit zijn met de volgende normen:  
till vilka denna deklARATION är relaterade, är i överensstämmelse med följande standarder:  
indicados na declaração estão em conformidade com as normas seguintes:  
к которым относится данная декларация, соответствуют следующим стандартам:


a. EN 60 335-1 d. EN 55 014-2  
b. EN 60 335-2-40 e. EN 61 000-3-2  
c. EN 55 014-1 f. EN 60 335-2-80  
g. EN 60 335-2-80

By conformance with the standards, the referenced products follows the provisions of the directives listed below:  
In Übereinstimmung mit den Standards, erfüllen die obengenannten Produkte den Verordnungen der unten aufgeführten EG-Richtlinien:  
Par leur conformité aux normes précitées, les appareils de ce type répondent aux exigences des directives suivantes:  
De acuerdo con estas normas, los productos referenciados cumplen lo estipulado por las directivas listadas a continuación:  
Od altri documenti normativi conformi alle disposizioni delle direttive sotto elencate:  
Τα αναφερόμενα μοντέλα, σύμφωνα με τους κανονισμούς, ακολουθούν τις απαιτήσεις ασφαλείας των κάτωθι άρθρων:  
Overeenkomstig de normen, voldoen de betreffende produkten aan de bepalingen van de hieronder vermelde richtlijnen:  
Genom överensstämmelse med dessa standarder, uppfyller de berörda produkterna föreskrifterna i de direktiv som anges här nedan:  
Os seguintes produtos referenciados na lista abaixo, estão em conformidade com as normas:  
Соответствуя указанным стандартам, данные изделия отвечают требованиям ниже перечисленных директив:

a. EC Council Directive 73/23/EEC b. EC Council Directive 89/336/EEC

Place of Issue : F.R. Germany Title of Authority : General Manager  
Date of Issue : 14. FEBRUARY 2003 Declaration Reference : FUJITSU GENERAL  
(EURO) GmbH  
Werftstraße 20, D-40549  
Düsseldorf, F. R. Germany  
Authorized by : Signature:   
JUNJI YANAGIMOTO

FUJITSU GENERAL LIMITED  
1116, Suenaga, Takatsu-ku, Kawasaki 213-8502, Japan

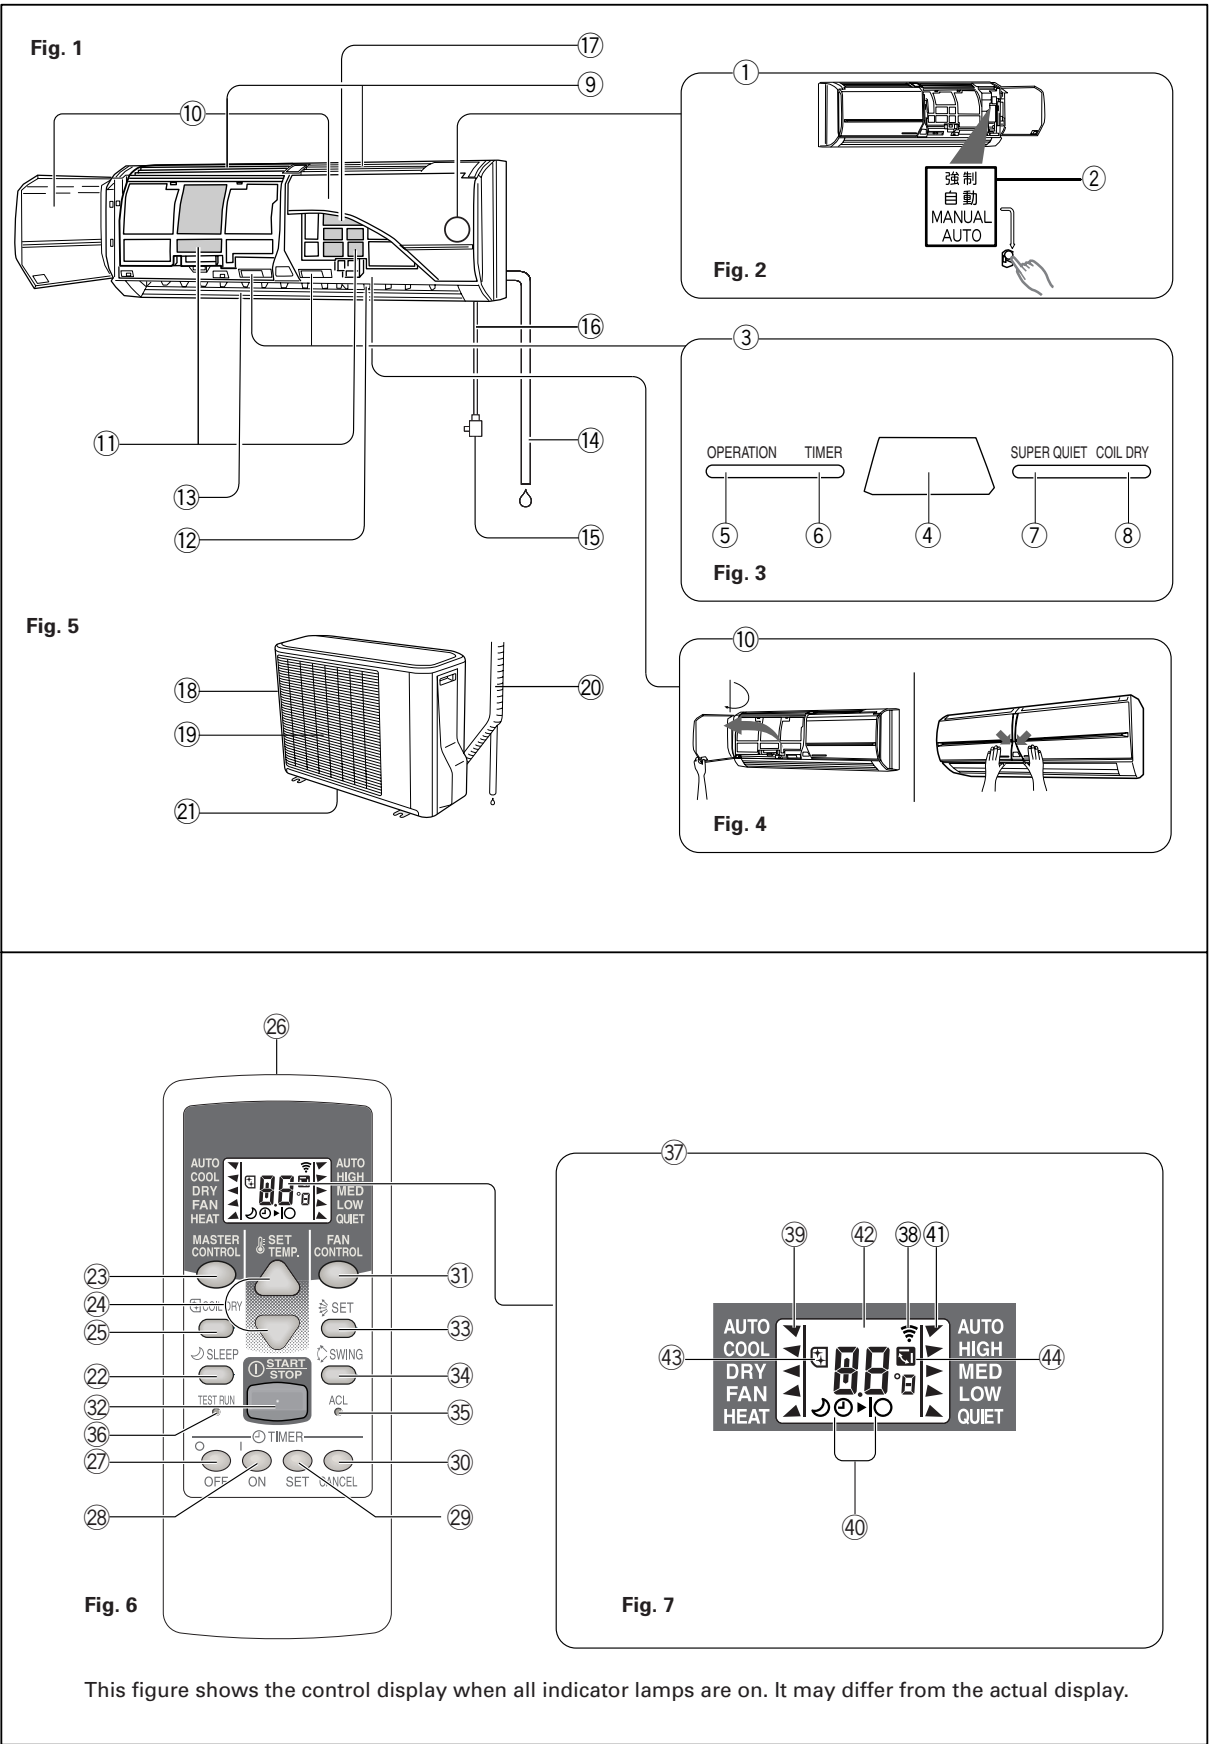

CONTENTS

SAFETY PRECAUTIONS .....	En-1	ADJUSTING THE DIRECTION OF	
FEATURES AND FUNCTIONS .....	En-2	AIR CIRCULATION .....	En-9
NAME OF PARTS .....	En-3	SWING OPERATION .....	En-10
PREPARATION .....	En-4	COIL DRY OPERATION .....	En-10
OPERATION .....	En-5	MANUAL AUTO OPERATION .....	En-10
TIMER OPERATION .....	En-7	CLEANING AND CARE .....	En-11
SLEEP TIMER OPERATION .....	En-8	TROUBLESHOOTING .....	En-12
		OPERATING TIPS .....	En-13

SAFETY PRECAUTIONS

- DANGER!**
- Do not attempt to install this air conditioner by yourself.
  - This unit contains no user-serviceable parts. Always consult authorized service personnel for repairs.
  - When moving, consult authorized service personnel for disconnection and installation of the unit.
  - Do not become excessively chilled by staying for lengthy periods in the direct cooling airflow.
  - Do not insert fingers or objects into the outlet port or intake grilles.
  - Do not start and stop air conditioner operation by disconnecting the power supply cord and so on.
  - Take care not to damage the power supply cord.
  - In the event of a malfunction (burning smell, etc.), immediately stop operation, disconnect the power supply plug, and consult authorized service personnel.
  - If the power supply cord of this appliance is damaged, it should only be replaced by the authorized service personal, since special purpose tools and specified cord are required.

- CAUTION!**
- Provide occasional ventilation during use.
  - Do not direct air flow at fireplaces or heating apparatus.
  - Do not climb on, or place objects on, the air conditioner.
  - Do not hang objects from the indoor unit.
  - Do not set flower vases or water containers on top of air conditioners.
  - Do not expose the air conditioner directly to water.
  - Do not operate the air conditioner with wet hands.
  - Do not pull power supply cord.
  - Turn off power source when not using the unit for extended periods.
  - Check the condition of the installation stand for damage.
  - Do not place animals or plants in the direct path of the air flow.
  - Do not drink the water drained from the air conditioner.
  - Do not use in applications involving the storage of foods, plants or animals, precision equipment, or art works.
  - Connection valves become hot during Heating; handle with care.
  - Do not apply any heavy pressure to radiator fins.
  - Operate only with air filters installed.
  - Do not block or cover the intake grille and outlet port.
  - Ensure that any electronic equipment is at least one metre away from either the indoor or outdoor units.
  - Avoid installing the air conditioner near a fireplace or other heating apparatus.
  - When installing the indoor and outdoor unit, take precautions to prevent access to infants.
  - Do not use inflammable gases near the air conditioner.

En-1

MODEL MODELL MODELE MODELLO MONTEAO	INDOOR UNIT INNENGERÄT UNITÉ INTERIEURE	UNIDAD INTERIOR APPARECCHIO INTERNO ΕΣΩΤΕΡΙΚΗ ΜΟΝΑΔΑ	ASY9LSACW
	OUTDOOR UNIT AUSSENGERÄT UNITÉ EXTERIEURE	UNIDAD EXTERIOR APPARECCHIO ESTERNO ΕΞΩΤΕΡΙΚΗ ΜΟΝΑΔΑ	AOY9LSAC
ESPECIFICACIONES			
ALIMENTACIÓN .....		230 V-50 Hz	PRESIÓN MÁX. SUCCIÓN .....
REFRIGERACIÓN .....		2,6 kW (Mínimo 0,5 - Máximo 3,6 kW)	DESCARGA .....
CAPACIDAD .....		0,68 kW (Mínimo 0,25 - Máximo 1,38 kW)	REFRIGERANTE .....
ENTRADA DE ALIMENTACIÓN .....		3,0 A	R410A 950 g
CORRIENTE .....		3,82	DIMENSIONES Y PESO
RAZÓN DE EFICIENCIA DE ENERGÍA .....			UNIDAD INTERIOR
CALEFACCIÓN .....		3,6 kW (Mínimo 0,5 - Máximo 6,0 kW)	Altura/anchura/profundidad .....
CAPACIDAD .....		0,91 kW (Mínimo 0,25 - Máximo 1,96 kW)	Peso .....
ENTRADA DE ALIMENTACIÓN .....		4,0 A	UNIDAD EXTERIOR
CORRIENTE .....		8,5A	Altura/anchura/profundidad .....
CORRIENTE MÁX .....		6,0 A	Peso .....
Refrigeración .....			33 kg (NETO)
Calificación .....			
DATI TECNICI			
ALIMENTAZIONE .....		230 V-50 Hz	PRESSIONE MASSIMA
RAFFREDDAMENTO .....		2,6 kW (minimo 0,5 - massimo 3,6 kW)	ASPIRAZIONE .....
CAPACITÀ .....		0,68 kW (minimo 0,25 - massimo 1,38 kW)	EMISSIONE .....
CONSUMO .....		3,0 A	REFRIGERANTE .....
CORRENTE .....		3,82	R410A 950 g
RAPPORTO ENERGETICO DI EFFICIENZA .....			DIMENSIONI E PESO
RISCALDAMENTO .....		3,6 kW (minimo 0,5 - massimo 6,0 kW)	APPARECCHIO INTERNO
CAPACITÀ .....		0,91 kW (minimo 0,25 - massimo 1,96 kW)	Altezza x Larghezza x Profondità .....
CONSUMO .....		4,0 A	Peso .....
CORRENTE .....		8,5 A	APPARECCHIO ESTERNO
CORRENTE MASSIMA .....		6,0 A	Altezza x Larghezza x Profondità .....
Raffreddamento .....			Peso .....
Riscaldamento .....			33 kg (netti)
ΧΑΡΑΚΤΗΡΙΣΤΙΚΑ			
ΤΡΟΦΟΔΟΣΙΑ .....		230 V-50 Hz	ΜΕΓΙΣΤΗ ΠΙΕΣΗ
ΨΥΞΗ .....		2,6 kW (Ελάχιστο 0,5 - Μέγιστο 3,6 kW)	ΑΝΑΡΡΟΦΗ .....
ΙΣΧΥΣ ΕΙΣΟΔΟΥ .....		0,68 kW (Ελάχιστο 0,25 - Μέγιστο 1,38 kW)	ΕΚΤΟΝΩΣΗ .....
ΡΕΥΜΑ .....		3,0 A	ΨΥΚΤΙΚΟ .....
ΣΥΝΤΕΛΕΣΤΗΣ ΑΠΟΔΟΣΕΩΣ ΕΝΕΡΓΕΙΑΣ .....		3,82	R410A 950 g
ΘΕΡΜΑΝΣΗ .....		3,6 kW (Ελάχιστο 0,5 - Μέγιστο 6,0 kW)	ΔΙΑΣΤΑΣΕΙΣ ΚΑΙ ΒΑΡΟΣ
ΔΥΝΑΤΟΤΗΤΑ .....		0,91 kW (Ελάχιστο 0,25 - Μέγιστο 1,96 kW)	ΕΞΩΤΕΡΙΚΗ ΜΟΝΑΔΑ
ΙΣΧΥΣ ΕΙΣΟΔΟΥ .....		4,0 A	ΥΨΟΣ/ΠΛΑΤΟΣ/ΒΑΘΟΣ .....
ΡΕΥΜΑ .....		8,5 A	ΒΑΡΟΣ .....
Μέγιστη Χωρητικότητα .....		6,0 A	ΕΞΩΤΕΡΙΚΗ ΜΟΝΑΔΑ
Ψύξη .....			ΥΨΟΣ/ΠΛΑΤΟΣ/ΒΑΘΟΣ .....
Θέρμανση .....			ΒΑΡΟΣ .....
			33 kg (KASAPO)

MODEL MODELL MODELE MODELLO MONTEAO	INDOOR UNIT INNENGERÄT UNITÉ INTERIEURE	UNIDAD INTERIOR APPARECCHIO INTERNO ΕΣΩΤΕΡΙΚΗ ΜΟΝΑΔΑ	ASY12LSACW
	OUTDOOR UNIT AUSSENGERÄT UNITÉ EXTERIEURE	UNIDAD EXTERIOR APPARECCHIO ESTERNO ΕΞΩΤΕΡΙΚΗ ΜΟΝΑΔΑ	AOY12LSAC
ESPECIFICACIONES			
ALIMENTACIÓN .....		230 V-50 Hz	PRESIÓN MÁX. SUCCIÓN .....
REFRIGERACIÓN .....		3,5 kW (Mínimo 0,9 - Máximo 4,2 kW)	DESCARGA .....
CAPACIDAD .....		1,03 kW (Mínimo 0,25 - Máximo 1,61 kW)	REFRIGERANTE .....
ENTRADA DE ALIMENTACIÓN .....		4,6 A	R410A 1100 g
CORRIENTE .....		3,40	DIMENSIONES Y PESO
RAZÓN DE EFICIENCIA DE ENERGÍA .....			UNIDAD INTERIOR
CALEFACCIÓN .....		4,8 kW (Mínimo 0,9 - Máximo 6,6 kW)	Altura/Anchura/Profundidad .....
CAPACIDAD .....		1,33 kW (Mínimo 0,25 - Máximo 2,3 kW)	Peso .....
ENTRADA DE ALIMENTACIÓN .....		5,8 A	UNIDAD EXTERIOR
CORRIENTE .....		7,0 A	Altura/Anchura/Profundidad .....
CORRIENTE MÁX .....		10,0 A	Peso .....
Refrigeración .....			34 kg
Calificación .....			
DATI TECNICI			
ALIMENTAZIONE .....		230 V-50 Hz	PRESSIONE MASSIMA
RAFFREDDAMENTO .....		3,5 kW (minimo 0,9 - massimo 4,2 kW)	ASPIRAZIONE .....
CAPACITÀ .....		1,03 kW (minimo 0,25 - massimo 1,61 kW)	EMISSIONE .....
CONSUMO .....		4,6 A	REFRIGERANTE .....
CORRENTE .....		3,40	R410A 1100 g
RAPPORTO ENERGETICO DI EFFICIENZA .....			DIMENSIONI E PESO
RISCALDAMENTO .....		4,8 kW (minimo 0,9 - massimo 6,6 kW)	APPARECCHIO INTERNO
CAPACITÀ .....		1,33 kW (minimo 0,25 - massimo 2,3 kW)	Altezza x Larghezza x Profondità .....
CONSUMO .....		5,8 A	Peso .....
CORRENTE .....		7,0 A	APPARECCHIO ESTERNO
CORRENTE MASSIMA .....		10,0 A	Altezza x Larghezza x Profondità .....
Raffreddamento .....			Peso .....
Riscaldamento .....			34 kg (netti)
ΧΑΡΑΚΤΗΡΙΣΤΙΚΑ			
ΤΡΟΦΟΔΟΣΙΑ .....		230 V-50 Hz	ΜΕΓΙΣΤΗ ΠΙΕΣΗ
ΨΥΞΗ .....		3,5 kW (Ελάχιστο 0,9 - Μέγιστο 4,2 kW)	ΑΝΑΡΡΟΦΗ .....
ΙΣΧΥΣ ΕΙΣΟΔΟΥ .....		1,03 kW (Ελάχιστο 0,25 - Μέγιστο 1,61 kW)	ΕΚΤΟΝΩΣΗ .....
ΡΕΥΜΑ .....		4,6 A	ΨΥΚΤΙΚΟ .....
ΣΥΝΤΕΛΕΣΤΗΣ ΑΠΟΔΟΣΕΩΣ ΕΝΕΡΓΕΙΑΣ .....		3,40	R410A 1100 g
ΘΕΡΜΑΝΣΗ .....		4,8 kW (Ελάχιστο 0,9 - Μέγιστο 6,6 kW)	ΔΙΑΣΤΑΣΕΙΣ ΚΑΙ ΒΑΡΟΣ
ΔΥΝΑΤΟΤΗΤΑ .....		1,33 kW (Ελάχιστο 0,25 - Μέγιστο 2,3 kW)	ΕΞΩΤΕΡΙΚΗ ΜΟΝΑΔΑ
ΙΣΧΥΣ ΕΙΣΟΔΟΥ .....		5,8 A	ΥΨΟΣ/ΠΛΑΤΟΣ/ΒΑΘΟΣ .....
ΡΕΥΜΑ .....		7,0 A	ΒΑΡΟΣ .....
Μέγιστη Χωρητικότητα .....		10,0 A	ΕΞΩΤΕΡΙΚΗ ΜΟΝΑΔΑ
Ψύξη .....			ΥΨΟΣ/ΠΛΑΤΟΣ/ΒΑΘΟΣ .....
Θέρμανση .....			ΒΑΡΟΣ .....
			34 kg (KASAPO)

## FEATURES AND FUNCTIONS

### INVERTER

At the start of operation, a large power is used to bring the room quickly to the desired temperature. Afterwards, the unit automatically switches to a low power setting for economic and comfortable operation.

### COIL DRY OPERATION

The Indoor unit can be dried by pressing the COIL DRY button on the Remote Control Unit so as to avoid going moldy and restrain the breed of bacterium.

### AUTO CHANGEOVER

The operation mode (cooling, dry, heating) is switched automatically to maintain the set temperature, and the temperature is kept constant at all times.

### SLEEP TIMER

When the SLEEP button is pressed during Heating mode, the air conditioner's thermostat setting is gradually lowered during the period of operation; during cooling mode, the thermostat setting is gradually raised during the period of operation. When the set time is reached, the unit automatically turns off.

### WIRELESS REMOTE CONTROL UNIT

The Wireless Remote Control Unit allows convenient control of air conditioner operation.

### SWING OPERATION

The Air Flow Direction Louvers swings automatically up and down so that the air speeds to every nook and corner of your room.

### REMOVABLE OPEN PANEL

The indoor unit's Open Panel can be removed for easy cleaning and maintenance.

### MILDEW-RESISTANT FILTER

The AIR FILTER has been treated to resist mildew growth, thus allowing cleaner use and easier care.

### SUPER QUIET OPERATION

When the FAN CONTROL button is used to select QUIET, the unit begins super-quiet operation; the indoor unit's air-flow is reduced to produce quieter operation.

### AIR CLEANING FILTER (Optional)

The optional Air Cleaning Filter (Model UTR-FA11-1) uses an electrostatic principle to clean the air of fine particulate matter such as tobacco smoke and plant pollen.

# NAME OF PARTS


**Fig. 1 Indoor Unit**

- ① Operating Control Panel (Fig. 2)
- ② MANUAL AUTO button
- ③ Indicator (Fig. 3)
- ④ Remote Control Signal Receiver
- ⑤ OPERATION Indicator Lamp (red)
- ⑥ TIMER Indicator Lamp (green)
  - If the TIMER indicator lamp flashes when the timer is operating, it indicates that a fault has occurred with the timer setting (See Page 13 Auto Restart).
- ⑦ SUPER QUIET Indicator Lamp (green)
- ⑧ COIL DRY Indicator Lamp (orange)
- ⑨ Intake Grille
- ⑩ Open Panel (Fig. 4)
- ⑪ Air Filter
- ⑫ Air Flow Direction Louver
- ⑬ Right-Left Louver  
(behind Air Flow Direction Louver)
- ⑭ Drain Hose
- ⑮ Power Supply Plug
- ⑯ Power Supply Cord
- ⑰ Air Cleaning Filter (optional)

**Fig. 5 Outdoor Unit**

- ⑱ Intake Port
- ⑲ Outlet Port
- ⑳ Pipe Unit
- ㉑ Drain port (bottom)

- Refer to the folded out page on the cover.

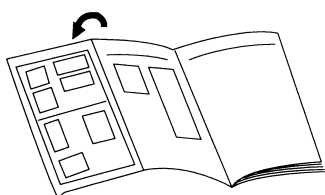

**Fig. 6 Remote Control Unit**

- ㉒ SLEEP button
- ㉓ MASTER CONTROL button
- ㉔ SET TEMP. button ( △ / ▽ )
- ㉕ COIL DRY button
- ㉖ Signal Transmitter
- ㉗ OFF TIMER button
- ㉘ ON TIMER button
- ㉙ SET TIMER button
- ㉚ CANCEL TIMER button
- ㉛ FAN CONTROL button
- ㉜ START/STOP button
- ㉝ AIR FLOW DIRECTION button
- ㉞ SWING button
- ㉟ ACL button
- ㊱ TEST RUN button
  - This button is used when installing the conditioner, and should not be used under normal conditions, as it will cause the air conditioner's thermostat function to operate incorrectly.
  - If this button is pressed during normal operation, the unit will switch to test operation mode, and the Indoor Unit's OPERATION Indicator Lamp and TIMER Indicator Lamp will begin to flash simultaneously.
  - To stop the test operation mode, press the START/STOP button to stop the air conditioner.
- ㊲ Remote Control Unit Display (Fig. 7)
- ㊳ Transmit Indicator
- ㊴ Operating Mode Display
- ㊵ Timer Mode Display
  - OFF TIMER Mark: ○
  - ON TIMER Mark: |
  - SLEEP TIMER Mark: ↻
- ㊶ Fan Speed Display
- ㊷ Temperature and time Display
  - It displays the temperature setting. However, when making the Timer setting, it will display the Timer time. (The temperature setting will reappear after finishing the timer setting)
- ㊸ COIL DRY Display
- ㊹ SWING Display

## PREPARATION

### Turn on the Power

- 1 **Connect the Power Supply Plug (Fig. 1 ⑮) to an electrical outlet; in the case of a direct line connection, turn on the circuit breaker.**


### Load Batteries (R03/LR03 × 2)

- 1 **Press and slide the battery compartment lid on the reverse side to open it.**

Slide in the direction of the arrow while pressing the ▼ mark.

- 2 **Insert batteries.**

Be sure to align the battery polarities (⊕/⊖) correctly.

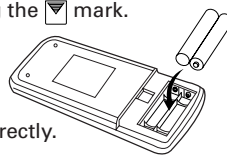

- 3 **Close the battery compartment lid.**

### ⚠ CAUTION!

- Take care to prevent infants from accidentally swallowing batteries.
- When not using the Remote Control Unit for an extended period, remove the batteries to avoid possible leakage and damage to the unit.
- If leaking battery fluid comes in contact with your skin, eyes, or mouth, immediately wash with copious amounts of water, and consult your physician.
- Dead batteries should be removed immediately and disposed of properly, either in a battery collection receptacle or to the appropriate authority.
- Do not attempt to recharge dry batteries.

Never mix new and used batteries, or batteries of different types. Batteries should last about one year under normal use. If the Remote Control Unit's operating range becomes appreciably reduced, replace the batteries and press the ACL button with the tip of a ballpoint pen or other small object.

### To Use the Remote Control Unit

- The Remote Control Unit must be pointed at signal receiver (Fig. 1 ④) to operate correctly.
- Operating Range: About 7 meters.
- When a signal is properly received by the air conditioner, a beeping sound will be heard.
- If no beep is heard, press the Remote Control Unit button again.







## To Stop Operation

### Press the START/STOP button.

The OPERATION indicator lamp (red) (Fig. 3 ⑤) will go out.

## About AUTO CHANGEOVER Operation

**AUTO:** ● When AUTO CHANGEOVER operation first selected, the fan will operate at very low speed for about one minute, during which time the unit detects the room conditions and selects the proper operating mode.

If the difference between thermostat setting and actual room temperature is more than +2 °C → Cooling or dry operation

If the difference between thermostat setting and actual room temperature is within ±2 °C → Monitor operation

If the difference between thermostat setting and actual room temperature is more than -2 °C → Heating operation

- When the air conditioner has adjusted your room's temperature to near the thermostat setting, it will begin monitor operation. In the monitor operation mode, the fan will operate at low speed. If the room temperature subsequently changes, the air conditioner will once again select the appropriate operation (Heating, Cooling) to adjust the temperature to the value set in the thermostat.

(The monitor operation range is ±2 °C relative to the thermostat setting.)

- If the mode automatically selected by the unit is not what you wish, select one of the mode operation (HEAT, COOL, DRY, FAN).

## About Mode Operation

**Heating:** ● Use to warm your room.

- When Heating mode is selected, the air conditioner will operate at very low fan speed for about 3 to 5 minutes, after which it will switch to the selected fan setting. This period of time is provided to allow the indoor unit to warm up before begin full operation.
- When the room temperature is very low, frost may form on the outside unit, and its performance may be reduced. In order to remove such frost, the unit will automatically enter the defrost cycle from time to time. During Automatic Defrosting operation, the OPERATION indicator lamp (red) will flash, and the heat operation will be interrupted.

**Cooling:** ● Use to cool your room.

**Dry:** ● Use for gently cooling while dehumidifying your room.

- You cannot heat the room during Dry mode.
- During Dry mode, the unit will operate at low speed; in order to adjust room humidity, the indoor unit's fan may stop from time to time. Also, the fan may operate at very low speed when adjusting room humidity.
- The fan speed cannot be changed manually when Dry mode has been selected.

**Fan:** ● Use to circulate the air throughout your room.

### During Heating mode:

Set the thermostat to a temperature setting that is higher than the current room temperature. The Heating mode will not operate if the thermostat is set lower than the actual room temperature.

### During Cooling/Dry mode:

Set the thermostat to a temperature setting that is lower than the current room temperature. The Cooling and Dry modes will not operate if the thermostat is set higher than the actual room temperature (in Cooling mode, the fan alone will operate).

### During Fan mode:

You can not use the unit to heat and cool your room.

# TIMER OPERATION

## To Use the OFF TIMER

- 1 Press the START/STOP button (Fig. 6 ㉓)**  
(if the unit is already operating, proceed to step 2).  
The Indoor Unit's OPERATION Indicator Lamp (red) (Fig. 3 ㉑) will light.
- 2 Press OFF TIMER button (Fig. 6 ㉔) to select the desired times.**  
Press OFF TIMER button to change from temperature setting to timer display.  
Each time the button is pressed, the time changes in the following order:  
→ 0.5 → 1.0 → 1.5 → 2.0 → ... → 9.0 → 9.5 → 10 → 11 → 12 (hour) →  
  
Set the time while the OFF TIMER mark (㊟▶○) on the Remote Control Unit's Display is flashing. (The flashing will continue for about 30 seconds)
- 3 Press SET button (Fig. 6 ㉕) to select OFF TIMER operation.**  
The OFF Timer Mark (㊟▶○) will be shown on the Remote Control Unit's Display.  
The Indoor Unit TIMER Indicator Lamp (green) will light.  
It can not be used during ON TIMER operation.

### To Cancel the Timer

Press the CANCEL TIMER button.

### To Change the Timer Settings

Press the ON TIMER button/OFF TIMER button as required. Perform Use TIMER step 2 and 3.

### To Stop Air Conditioner Operation while the Timer is Operating

Press the START/STOP button.

### To Change Operating Conditions

If you wish to change the operating conditions (Mode, Fan Speed, Thermostat Setting), after making the timer setting, wait until the entire display reappears, then press the appropriate buttons to change to the desired operating condition.

## To Use the ON TIMER

- 1 Press the START/STOP button (Fig. 6 ㉓)**  
(if the unit is already operating, proceed to step 2).  
The Indoor Unit's OPERATION Indicator Lamp (red) (Fig. 3 ㉑) will light.
- 2 Press ON TIMER button (Fig. 6 ㉖) to set the expected time.**  
If ON TIMER button is pressed, it will be changed into time display from temperature setting display.  
Each time the button is pressed, the time time changes in the following order:  
→ 6.0 → 6.5 → 7.0 → ... → 9.0 → 9.5 → 10 → 11  
5.5 ← 5.0 ← ... ← 1.0 ← 0.5 ← 12(hour) ←  
  
Set the time while the ON TIMER mark (㊟▶▶) on the Remote Control Unit's Display is flashing. (The flashing will continue for about 30 seconds)
- 3 Press SET button (Fig. 6 ㉕) to select ON TIMER operation.**  
The ON Timer mark (㊟▶▶) will be shown on the Remote Control Unit's Display.  
The Indoor Unit Timer Indicator Lamp (green) Will light.  
It can not be used during OFF TIMER operation.

### To Cancel the Timer

Press the CANCEL TIMER button.

### To Change the Timer Settings

Press the ON TIMER button/OFF TIMER button as required. Perform Use TIMER step 2 and 3.

### To Stop Air Conditioner Operation while the Timer is Operating

Press the START/STOP button.

### To Change Operating Conditions

If you wish to change operating conditions (Mode, Fan Speed, Thermostat Setting), after making the timer setting wait until the entire display reappears, then press the appropriate buttons to change the operating condition desired.



# SLEEP TIMER OPERATION


Unlike other timer functions, the SLEEP timer is used to set the length of time until air conditioner operate is stopped.

## To Use the SLEEP timer

**While the air conditioner is operating or stopped, press the SLEEP button (Fig. 6 ㉔).**

The SLEEP TIMER mark ( ㉔ ㉔ ㉔ ㉔ ) on the Remote Control Unit's Display will light. Within 3 seconds after ( ㉔ ㉔ ㉔ ㉔ ) light the time can be changed by pressing SLEEP button once again.

Each time the button is pressed, the time changes in the following order:



About three seconds later, the entire display will reappear.

The Indoor Unit's OPERATION Indicator Lamp (red) (Fig. 3 ㉔) and the TIMER indicator lamp (green) (Fig. 3 ㉔) light.

## To Cancel the Timer:

Press the CANCEL TIMER button.

## To Stop the Air Conditioner During Timer Operation:


Press the START/STOP button.

## To Change the Timer Settings

**Press the SLEEP button once to display the last setting time.**

**Press the SLEEP button again to change the time.**

Each time the button is pressed, the time changes in the following order (Change from the last setting time):




## About the SLEEP timer

To prevent excessive warming or cooling during sleep, the SLEEP timer function automatically modifies the thermostat setting in accordance with the time setting. When the time has elapsed, the air conditioner completely stops.

### During Heating operation:

When the SLEEP timer is set, the thermostat setting is automatically lowered 1°C every thirty minutes. When the thermostat has been lowered a total of 4°C, the thermostat setting at that time is maintained until the set time has elapsed, at which time the air conditioner automatically turns off.


SLEEP timer setting

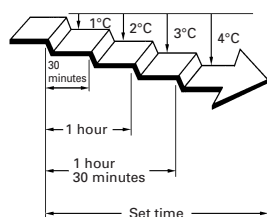

### During Cooling/Dry operation:

When the SLEEP timer is set, the thermostat setting is automatically raised 1 °C every sixty minutes. When the thermostat has been raised a total of 2 °C, the thermostat setting at that time is maintained until the set time has elapsed, at which time the air conditioner automatically turns off.

SLEEP timer setting

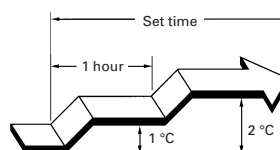

## Confirmation of TIMER's time

To confirm each TIMER's time, press SET button while setting OFF TIMER, ON TIMER or SLEEP TIMER (or during running). If SET button is pressed, it will be changed into time display from temperature setting display. The left time of the TIMER which is being set currently will be displayed for 5 seconds, then it will return to temperature setting display.

# ADJUSTING THE DIRECTION OF AIR CIRCULATION

Vertical (up-down) direction of airflow is adjusted by pressing the Remote Control Unit's AIR FLOW DIRECTION button. Horizontal (right-left) airflow direction is adjusted manually, by moving the Air Flow Direction Louvers. Whenever making horizontal airflow adjustments, start air conditioner operation and be sure that the vertical air direction louvers are stopped.

## Vertical Air Direction Adjustment

**Press the AIR FLOW DIRECTION button (Fig. 6 ㉓).**


Each time the button is pressed, the air direction range will change as follows:

① ↔ ② ↔ ③ ↔ ④ ↔ ⑤ ↔ ⑥ ↔ ⑦

### Types of Air flow Direction Setting:

- ①,②,③ : During Cooling/Dry modes
- ④,⑤,⑥,⑦ : During Heating mode

The Remote Control Unit's display does not change.

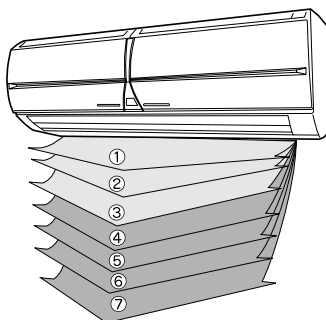

- Use the air direction adjustments within the ranges shown above.
- The vertical airflow direction is set automatically as shown, in accordance with the type of operation selected.
  - During Cooling/Dry mode : Horizontal flow ①
  - During Heating mode : Downward flow ⑦
- During AUTO mode operation, for the first minute after beginning operation, airflow will be horizontal ①; the air direction cannot be adjusted during this period.


## ⚠ DANGER!

- Never place fingers or foreign objects inside the outlet ports, since the internal fan operates at high speed and could cause personal injury.
- Always use the Remote Control Unit's AIR FLOW DIRECTION button to adjust the vertical airflow louvers. Attempting to move them manually could result in improper operation; in this case, stop operation and restart. The louvers should begin to operate properly again.
- During use of the Cooling and Dry modes, do not set the Air Flow Direction Louvers in the Heating range (④ - ⑦) for long periods of time, since water vapor may condense near the outlet louvers and drops of water may drip from the air conditioner. During the Cooling and Dry modes, if the Air Flow Direction Louvers are left in the heating range for more than 30 minutes, they will automatically return to position ③.
- When used in a room with infants, children, elderly or sick persons, the air direction and room temperature should be considered carefully when making settings.

## Right-Left Adjustment

**Adjust the Right-Left louvers.**

- Move the Right-Left louvers to adjust air flow in the direction you prefer.

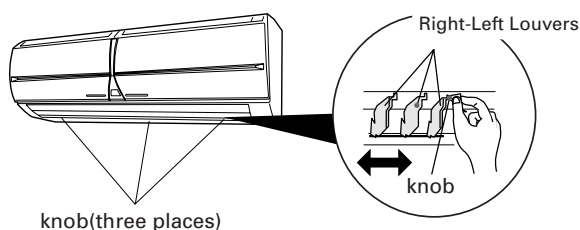

## ⚠ DANGER!

- When adjusting the Right-Left Louvers, it is necessary to stop the Air-Conditioner first and make sure that it stops completely before adjusting the direction.

## SWING OPERATION

Begin air conditioner operation before performing this procedure.

### To select SWING Operation

**Press the SWING button (Fig. 6 ③④).**

The SWING Display (Fig. 7 ④) will light.

In this mode, the Air Flow Direction Louvers will swing automatically to direct the air flow both up and down.

### To stop SWING Operation

**Press the SWING button (Fig. 6 ③④) once again.**

The SWING Display (Fig. 7 ④) will go out.

Airflow direction will return to the setting before swing was begun.

### About Swing Operation

During cooling/Dry mode : Swings between ① and ③.

During heating mode : Swings between ③ and ⑦.

- The SWING operation may stop temporarily when the air conditioner's fan is not operating, or when operating at very low speeds.

## COIL DRY OPERATION

The Indoor unit can be dried by pressing the COIL DRY button on the Remote Control Unit so as to avoid going moldy and restrain the breed of bacterium.

The COIL DRY Operation will operate for 20 minutes after pressing the COIL DRY button and it will stop automatically.

### To select COIL DRY Operation

**Press the COIL DRY button during operation or when it stops.**

The COIL DRY Display (Fig. 7 ④③) will light. Then it will disappear after 20 minutes.

### To cancel COIL DRY Operation

**Press the START/STOP button during COIL DRY Operation.**

The COIL DRY Display (Fig. 7 ④③) will go out . Then the operation stops.

### About COIL DRY Operation

- Press the COIL DRY button again during COIL DRY Operation, COIL DRY Operation can be reset.
- The COIL DRY Operation cannot get rid of the existed mould or bacterium, and it has no sterilization effect either.

## MANUAL AUTO OPERATION

Use the MANUAL AUTO operation in the event the Remote Control Unit is lost or otherwise unavailable.

### How To Use the Main Unit Controls

**Press the MANUAL AUTO button (Fig. 2 ②) on the main unit control panel.**

To stop operation, press the MANUAL AUTO button once again.  
(Controls are located inside the Open Panel)

- When the air conditioner is operated with the controls on the Main Unit, it will operate under the same mode as the AUTO mode selected on the Remote Control Unit (see page 6).
- The fan speed selected will be "AUTO" and the thermostat setting will be standard.(24°C)



## CLEANING AND CARE


### CAUTION!

- Before cleaning the air conditioner, be sure to turn it off and disconnect the Power Supply Cord.
- Be sure the Open Panel (Fig. 1 ⑩) is installed securely.
- When removing and replacing the Air Filters, be sure not to touch the heat exchanger, as personal injury may result.

#### Cleaning the Open Panel

##### 1. Remove the Open Panel.

- ① Put the hand at the arrowhead and pull the Open Panel to 90°C ahead of you, then open it.
- ② Raise the Open Panel and remove it.
- ③ Remove the other side Open Panel in the same procedure of 1 and 2.

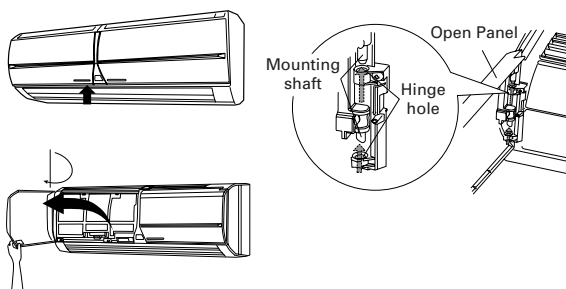


##### 2. Clean with water.

Remove dust with a vacuum cleaner; wipe the unit with warm water, then dry with a clean, soft cloth.

##### 3. Replace the Open Panel.


- ① Insert the mounting shafts of the Open Panel into the hole of the hinge and install it.
- ② Install the Open Panel at the other side in the same procedure with ①.
- ③ Press the place where the arrow on the diagram indicates and close the Open Panel.

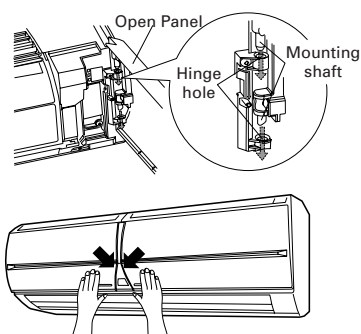

#### Cleaning the Air Filter

##### 1. Open the Open Panel, and remove the Air Filter.

- ① Raise the Air Filter handle and remove the bottom of hooks (two places). Hold both sides with hand and pull it out (At this time, the Grill will be pulled out together with the Air filter).
- ② Raise the hooks of the Grille close to you and remove.
- ③ Remove the hooks at the back of the Grille.

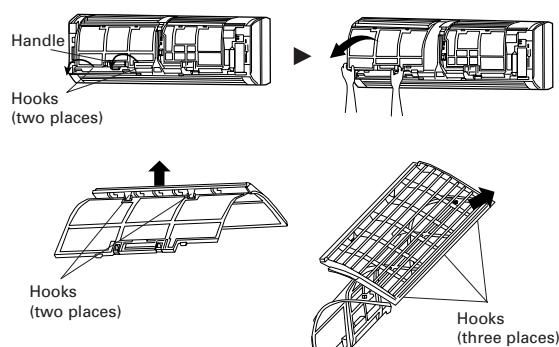

##### 2. Remove dust with a vacuum cleaner or by washing.

After washing, allow to dry thoroughly in a shaded place.

##### 3. Replace the Air Filter and close the Open Panel.

Install the Air Filter in the adverse procedure with ①.

- Dust can be cleaned from the Air Filter either with a vacuum cleaner, or by washing the filter in a solution of mild detergent and warm water. If you wash the filter, be sure to allow it to dry thoroughly in a shady place before reinstalling.
- If dirt is allowed to accumulate on the Air Filter, air flow will be reduced, lowering operating efficiency and increasing noise.
- During periods of normal use, the Air Filters should be cleaned every two weeks.

#### When using the optional Air Cleaning Filter

- Install the optional Air Cleaning Filter set (UTR-FA11-1) as instructed (installation instructions are furnished with the Air Cleaning Filter set).

- When used for extended periods, the unit may accumulate dirt inside, reducing its performance. We recommend that the unit be inspected regularly, in addition to your own cleaning and care. For more information, consult authorized service personnel.
- When cleaning the unit's body, do not use water hotter than 40 °C, harsh abrasive cleansers, or volatile agents like benzene or thinner.
- Do not expose the unit body to liquid insecticides or hairsprays.
- When shutting down the unit for one month or more, first allow the fan mode to operate continuously for about one-half day to allow internal parts to dry thoroughly.

# TROUBLESHOOTING

## ⚠ WARNING!

In the event of a malfunction (burning smell, etc.), immediately stop operation, disconnect the Power Supply Plug, and consult authorized service personnel.

Merely turning off the unit's power switch will not completely disconnect the unit from the power source. Always be sure to disconnect the Power Supply Plug or turn off your circuit breaker to ensure that power is completely off.

Before requesting service, perform the following checks:

	Symptom	Problem	See Page
NORMAL FUNCTION	Doesn't operate immediately:	<ul style="list-style-type: none"> <li>● If the unit is stopped and then immediately started again, the compressor will not operate for about 3 minutes, in order to prevent fuse blowouts.</li> <li>● Whenever the Power Supply Plug is disconnected and then re-connected to a power outlet, the protection circuit will operate for about 3 minutes, preventing unit operation during that period.</li> </ul>	—
	Noise is heard:	<ul style="list-style-type: none"> <li>● During operation and immediately after stopping the unit, the sound of water flowing in the air conditioner's piping may be heard. Also, noise may be particularly noticeable for about 2 to 3 minutes after starting operation (sound of coolant flowing).</li> <li>● During operation, a slight squeaking sound may be heard. This is the result of minute expansion and contraction of the front cover due to temperature changes.</li> </ul>	—
		<ul style="list-style-type: none"> <li>● During Heating operation, a sizzling sound may be heard occasional. This sound is produced by the Automatic Defrosting operation.</li> </ul>	13
	Smells:	<ul style="list-style-type: none"> <li>● Some smell may be emitted from the indoor unit. This smell is the result of room smells (furniture, tobacco, etc.) which have been taken into the air conditioner.</li> </ul>	—
	Mist or steam are emitted:	<ul style="list-style-type: none"> <li>● During Cooling or Dry operation, a thin mist may be seen emitted from the indoor unit. This results from the sudden Cooling of room air by the air emitted from the air conditioner, resulting in condensation and misting.</li> </ul>	—
		<ul style="list-style-type: none"> <li>● During Heating operation, the outdoor unit's fan may stop, and steam may be seen rising from the unit. This is due to Automatic Defrosting operation.</li> </ul>	13
	Airflow is weak or stops:	<ul style="list-style-type: none"> <li>● When Heating operation is started, fan speed is temporarily very low, to allow internal parts to warm up.</li> <li>● During Heating operation, if the room temperature rises above the thermostat setting, the outdoor unit will stop, and the indoor unit will operate at very low fan speed. If you wish to warm the room further, set the thermostat for a higher setting.</li> </ul>	—
		<ul style="list-style-type: none"> <li>● During Heating operation, the unit will temporarily stop operation (between 7 and 15 minutes) as the Automatic Defrosting mode operates. During Automatic Defrosting operation, the OPERATION indicator lamp will flash.</li> </ul>	13
		<ul style="list-style-type: none"> <li>● The fan may operate at very low speed during Dry operation or when the unit is monitoring the room's temperature.</li> </ul>	5
		<ul style="list-style-type: none"> <li>● During SUPER QUIET operation, the fan will operate at very low speed.</li> </ul>	5
		<ul style="list-style-type: none"> <li>● In the monitor AUTO operation, the fan will operate at very low speed.</li> </ul>	5
	Water is produced from the outdoor unit:	<ul style="list-style-type: none"> <li>● During Heating operation, water may be produced from the outdoor unit due to Automatic Defrosting operation.</li> </ul>	13

En-12



## TROUBLESHOOTING

	Symptom	Items to check	See Page
CHECK ONCE MORE	Doesn't operate at all:	<ul style="list-style-type: none"> <li>● Is the Power Supply Plug disconnected its outlet?</li> <li>● Has there been a power failure?</li> <li>● Has a fuse blown out, or a circuit breaker been tripped?</li> </ul>	—
		<ul style="list-style-type: none"> <li>● Is the timer operating?</li> </ul>	7 - 8
	Poor Cooling performance:	<ul style="list-style-type: none"> <li>● Is the Air Filter dirty?</li> <li>● Air the air conditioner's intake grille or outlet port blocked?</li> <li>● Did you adjust the room temperature settings (thermostat) correctly?</li> <li>● Is there a window or door open?</li> <li>● In the case of Cooling operation, is a window allowing bright sunlight to enter? (Close the curtains.)</li> <li>● In the case of Cooling operation, are there heating apparatus and computers inside the room, or are there too many people in the room?</li> </ul>	—
		<ul style="list-style-type: none"> <li>● Is the unit set for SUPER QUIET operation?</li> </ul>	5
	The unit operates differently from the Remote Control Unit's setting:	<ul style="list-style-type: none"> <li>● Are the Remote Control Unit's batteries dead?</li> <li>● Are the Remote Control Unit's batteries loaded properly?</li> </ul>	4

If the problem persists after performing these checks, or if you notice burning smells, or the TIMER indicator Lamp (Fig. 3 ⑥) flashes, immediately stop operation, disconnect the Power Supply Plug (Fig. 1 ⑫), and consult authorized service personnel.

## OPERATING TIPS

### Operation and Performance

#### Heating Performance

- This air conditioner operates on the heat-pump principle, absorbing heat from outdoor air and transferring that heat indoors. As a result, the operating performance is reduced as outdoor air temperature drops. If you feel that insufficient heating performance is being produced, we recommend you use this air conditioner in conjunction with another kind of heating appliance.
- Heat-pump air conditioners heat your entire room by recirculating air throughout the room, with the result that some time may be required after first starting the air conditioner until the room is heated.

#### Microcomputer-controlled Automatic Defrosting

- When using the Heating mode under conditions of low outdoor temperature and high humidity, frost may form on the outdoor unit, resulting in reduced operating performance.

In order to prevent this kind of reduced performance, this unit is equipped with a Microcomputer-controlled Automatic Defrosting function. If frost forms, the air conditioner will temporarily stop, and the defrosting circuit will operate briefly (for about 7-15 minutes).

During Automatic Defrosting operation, the OPERATION indicator lamp (red) will flash.

### AUTO Restart

#### In Event of Power Interruption

- The air conditioner power has been interrupted by a power failure. The air conditioner will then restart automatically in its previous mode when the power is restored.
- Operated by setting before the power failure.
- If a power failure occurs during TIMER operation, the timer will be reset and the unit will begin (or stop) operation at the new time setting. In the event that this (kind of timer fault occurs the TIMER Indicator Lamp will flash (see Page. 3).
- Use of other electrical appliances (electric shaver, etc.) or nearby use of a wireless radio transmitter may cause the air conditioner to malfunction. In this event, temporarily disconnect the Power Supply Plug, reconnect it, and then use the Remote Control Unit to resume operation.

## OPERATING TIPS

### Temperature and Humidity Range

	Cooling Mode	Dry Mode	Heating Mode
Outdoor temperature	About 21-43 °C	About 21-43 °C	About -5-24 °C
Indoor temperature	About 18-32 °C	About 18-32 °C	About 27 °C or less

- If the air conditioner is used under higher temperature conditioner than those listed, the built-in protection circuit may operate to prevent internal circuit damage. Also, during Cooling and Dry modes, if the unit is used under conditions of lower temperature than those listed above, the heat-exchanger may freeze, leading to water leakage and other damage.
- Do not use this unit for any purposes other than the Cooling, Dehumidifying, and air-circulation of rooms in ordinary dwellings.
- If the unit is used for long periods under high-humidity conditions, condensation may form on the surface of the indoor unit, and drip onto the floor or other objects underneath. (About 80% or more)

TYPE TYP TYPE TIPO ΤΙΠΟΣ	HEAT & COOL MODEL (REVERSE CYCLE) INVERTER FÜR HEIZEN UND KÜHLEN (Umkehrzyklus) INVERTER MODÈLE RÉVERSIBLE (CYCLE INVERSE) INVERSEUR MODELO DE REFRIGERACIÓN Y CAIEFACCIÓN (INVERSIÓN DE CICLO) INVERSOR MODELO PER RISCALDAMENTO E RAFFREDDAMENTO (CICLO AD INVERSIONE) INVERTER ΜΟΝΤΕΛΟ ΘΕΡΜΑΝΣΕΩΣ ΚΑΙ ΨΥΞΕΩΣ ( ΑΝΑ ΣΤΡΟΦΟΥ ΚΥΚΛΟΥ) ΑΝΑΣΤΡΟΦΕΑΣ
--------------------------------------	--

<b>SPECIFICATIONS</b>	
<b>POWER SUPPLY</b> .....	230 V-50 Hz
<b>COOLING</b>	
CAPACITY .....	2,6 kW (Minimum 0,5 -Maximum 3,6 kW)
INPUT POWER .....	0,68 kW (Minimum 0,25 -Maximum 1,38 kW)
CURRENT .....	3,0 A
ENERGY EFFICIENCY RATIO .....	3,82
<b>HEATING</b>	
CAPACITY .....	3,6 kW (Minimum 0,5 -Maximum 6,0 kW)
INPUT POWER .....	0,91 kW (Minimum 0,25 -Maximum 1,96 kW)
CURRENT .....	4,0 A
<b>MAX. CURRENT</b>	
Cooling .....	6,0 A
Heating .....	8,5 A
<b>MAX. PRESSURE</b>	
SUCTION .....	1,160 kPa
DISCHARGE .....	4,120 kPa
<b>REFRIGERANT</b> .....	R410A 950 g
<b>DIMENSIONS &amp; WEIGHT</b>	
<b>INDOOR UNIT</b>	
Height/Width/Depth .....	280/790/230mm
Weight .....	9,0 kg (NET)
<b>OUTDOOR UNIT</b>	
Height/Width/Depth .....	535/780/250 mm
Weight .....	33 kg (NET)

<b>TECHNISCHE DATEN</b>	
<b>STROMVERSORGUNG</b> .....	230 V-50 Hz
<b>KÜHLBETRIEB</b>	
KÜHLEISTUNG .....	2,6 kW (Min. 0,5 ~ Max. 3,6 kW)
LEISTUNGS-AUFNAHME .....	0,68 kW (Min. 0,25 ~ Max. 1,38 kW)
NENNSTROM .....	3,0 A
WIRKUNGS-GRADZAHL .....	3,82
<b>HEIZBETRIEB</b>	
HEIZLEISTUNG .....	3,6 kW (Min. 0,5 ~ Max. 6,0 kW)
LEISTUNGS-AUFNAHME .....	0,91 kW (Min. 0,25 ~ Max. 1,96 kW)
NENNSTROM .....	4,0 A
<b>MAX. STROMSTÄRKE</b>	
Kühlbetrieb .....	6,0 A
Heizbetrieb .....	8,5 A
<b>HÖCHSTZULÄSSIGER DRUCK</b>	
ANSAUGEN .....	1.160 kPa
ABGABE .....	4.120 kPa
<b>KÄLTEMITTEL</b> .....	R410A 950 g
<b>ABMESSUNGEN UND GEWICHT</b>	
<b>INNENGERÄT</b>	
Höhe/Breite/Tiefe .....	280/790/230 mm
Gewicht .....	9,0 kg (netto)
<b>AUßENGERÄT</b>	
Höhe/Breite/Tiefe .....	535/780/250 mm
Gewicht .....	33 kg (netto)

<b>FICHE TECHNIQUE</b>	
<b>ALIMENTATION</b> .....	230 V-50 Hz
<b>REFROIDISSEMENT</b>	
PUISSANCE FRIGORIFIQUE .....	2,6 kW (Minimum 0,5 -Maximum 3,6 kW)
PUISSANCE ABSORBÉE .....	0,68 kW (Minimum 0,25 -Maximum 1,38 kW)
INTENSITÉ .....	3,0 A
EFFICACITÉ FRIGORIFIQUE .....	3,82
<b>CHAUFFAGE</b>	
PUISSANCE FRIGORIFIQUE .....	3,6 kW (Minimum 0,5 -Maximum 6,0 kW)
PUISSANCE ABSORBÉE .....	0,91 kW (Minimum 0,25 -Maximum 1,96 kW)
INTENSITÉ .....	4,0 A
<b>INTENSITÉ MAXIMALE</b>	
Refroidissement .....	6,0 A
Chauffage .....	8,5 A
<b>PRESSION MAXIMALE</b>	
ASPIRATION .....	1.160 kPa
REFOULEMENT .....	4.120 kPa
<b>RÉFRIGÉRANT</b> .....	R410A 950 g
<b>DIMENSIONS ET POIDS</b>	
<b>UNITÉ INTÉRIEURE</b>	
H/L/P .....	280/790/230 mm
Poids .....	9,0 kg (NET)
<b>UNITÉ EXTÉRIEURE</b>	
H/L/P .....	535/780/250 mm
Poids .....	33 kg (NET)

TYPE TYP TYPE TIPO ΤΙΠΟΣ	HEAT & COOL MODEL (REVERSE CYCLE) INVERTER FÜR HEIZEN UND KÜHLEN (Umkehrzyklus) INVERTER MODÈLE RÉVERSIBLE (CYCLE INVERSE) INVERSEUR MODELO DE REFRIGERACIÓN Y CAIEFACCIÓN (INVERSIÓN DE CICLO) INVERSOR MODELO PER RISCALDAMENTO E RAFFREDDAMENTO (CICLO AD INVERSIONE) INVERTER ΜΟΝΤΕΛΟ ΘΕΡΜΑΝΣΕΩΣ ΚΑΙ ΨΥΞΕΩΣ ( ΑΝΑ ΣΤΡΟΦΟΥ ΚΥΚΛΟΥ) ΑΝΑΣΤΡΟΦΕΑΣ
--------------------------------------	--

<b>SPECIFICATIONS</b>	
<b>POWER SUPPLY</b> .....	230 V-50 Hz
<b>COOLING</b>	
CAPACITY .....	3,5 kW (Minimum 0,9 -Maximum 4,2 kW)
INPUT POWER .....	1,03 kW (Minimum 0,25 -Maximum 1,61 kW)
CURRENT .....	4,6 A
ENERGY EFFICIENCY RATIO .....	3,40
<b>HEATING</b>	
CAPACITY .....	4,8 kW (Minimum 0,9 -Maximum 6,6 kW)
INPUT POWER .....	1,33 kW (Minimum 0,25 -Maximum 2,3 kW)
CURRENT .....	5,8 A
<b>MAX. CURRENT</b>	
Cooling .....	7,0 A
Heating .....	10,0 A
<b>MAX. PRESSURE</b>	
SUCTION .....	1,160 kPa
DISCHARGE .....	4,120 kPa
<b>REFRIGERANT</b> .....	R410A 1100 g
<b>DIMENSIONS &amp; WEIGHT</b>	
<b>INDOOR UNIT</b>	
Height/Width/Depth .....	280/790/230 mm
Weight .....	9,0 kg (NET)
<b>OUTDOOR UNIT</b>	
Height/Width/Depth .....	535/780/250 mm
Weight .....	34 kg (NET)

<b>TECHNISCHE DATEN</b>	
<b>STROMVERSORGUNG</b> .....	230 V-50 Hz
<b>KÜHLBETRIEB</b>	
KÜHLEISTUNG .....	3,5 kW (Min. 0,9 ~ Max. 4,2 kW)
LEISTUNGS-AUFNAHME .....	1,03 kW (Min. 0,25 ~ Max. 1,61 kW)
NENNSTROM .....	4,6 A
WIRKUNGS-GRADZAHL .....	3,40
<b>HEIZBETRIEB</b>	
HEIZLEISTUNG .....	4,8 kW (Min. 0,9 ~ Max. 6,6 kW)
LEISTUNGS-AUFNAHME .....	1,33 kW (Min. 0,25 ~ Max. 2,3 kW)
NENNSTROM .....	5,8 A
<b>MAX. STROMSTÄRKE</b>	
Kühlbetrieb .....	7,0 A
Heizbetrieb .....	10,0 A
<b>HÖCHSTZULÄSSIGER DRUCK</b>	
ANSAUGEN .....	1.160 kPa
ABGABE .....	4.120 kPa
<b>KÄLTEMITTEL</b> .....	R410A 1100 g
<b>ABMESSUNGEN UND GEWICHT</b>	
<b>INNENGERÄT</b>	
Höhe/Breite/Tiefe .....	280/790/230 mm
Gewicht .....	9,0 kg (netto)
<b>AUßENGERÄT</b>	
Höhe/Breite/Tiefe .....	535/780/250 mm
Gewicht .....	34 kg (netto)

<b>FICHE TECHNIQUE</b>	
<b>ALIMENTATION</b> .....	230 V-50 Hz
<b>REFROIDISSEMENT</b>	
PUISSANCE FRIGORIFIQUE .....	3,5 kW (Minimum 0,9 -Maximum 4,2 kW)
PUISSANCE ABSORBÉE .....	1,03 kW (Minimum 0,25 -Maximum 1,61 kW)
INTENSITÉ .....	4,6 A
EFFICACITÉ FRIGORIFIQUE .....	3,40
<b>CHAUFFAGE</b>	
PUISSANCE FRIGORIFIQUE .....	4,8 kW (Minimum 0,9 -Maximum 6,6 kW)
PUISSANCE ABSORBÉE .....	1,33 kW (Minimum 0,25 -Maximum 2,3 kW)
INTENSITÉ .....	5,8 A
<b>INTENSITÉ MAXIMALE</b>	
Refroidissement .....	7,0 A
Chauffage .....	10,0 A
<b>PRESSION MAXIMALE</b>	
ASPIRATION .....	1.160 kPa
REFOULEMENT .....	4.120 kPa
<b>RÉFRIGÉRANT</b> .....	R410A 1100 g
<b>DIMENSIONS ET POIDS</b>	
<b>UNITÉ INTÉRIEURE</b>	
H/L/P .....	280/790/230 mm
Poids .....	9,0 kg (NET)
<b>UNITÉ EXTÉRIEURE</b>	
H/L/P .....	535/780/250 mm
Poids .....	34 kg (NET)